



RB 500/ 1000 / 1300 / 1500 BARRIER INSTALLATION GUIDE

Primarily used in the motorsport industry both indoor and outdoor, these would most commonly be used to mark the perimeter of a racetrack.

People to Install:



Equipment / Accessories Needed:

No accessories or tools required.



Place the barriers into position as required to create your perimeter.




Then, slide the protruding end of the first barrier over the hole of the barrier you want to connect.



Repeat this process with other barriers needed. This system can be shaped to allow for 'S' shapes and curves, simply adjust your line of barriers as required.



Next you can now fill the barrier with water by removing the cap and using a hose. (Ensure the drainage plug is tight and not leaking when you do this!).

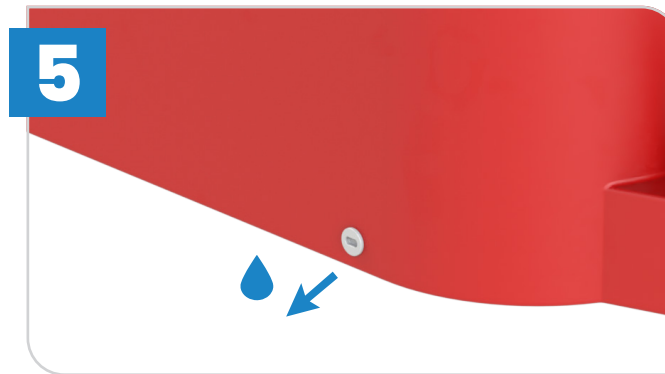

To clear out the water, reverse the process in Step 4 using the drainage tap at the bottom.