



BUDDHA BARRIER INSTALLATION GUIDE

This barrier creates a safer environment for pedestrians over traditional water filled separators. It can rotate over 270° due to its unique design and placed in a 90° corner layout if required to create small sealed off areas.

People to Install:



Equipment / Accessories Needed:

No accessories required

1




Where possible make sure the Buddha is placed on even ground.

2



Before connecting the Buddha barriers, please position the barriers side by side, aligning the interlocking clips.

3

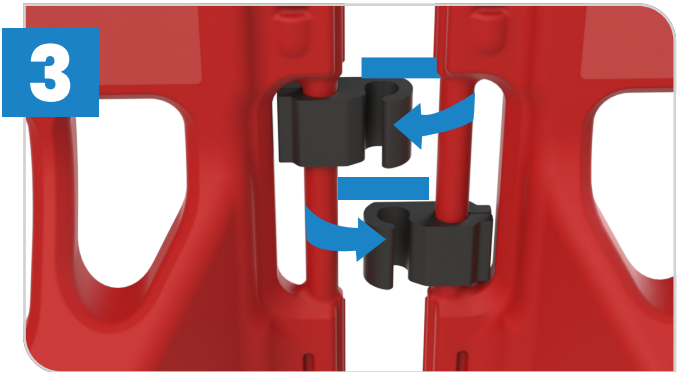


Wrap the top interlocking clip around the adjacent barrier and push it firmly until it is securely fastened to the vertical bar.

4




This barrier can be positioned at a 90° angle. This can be configured in two ways, pivoting the barrier on the interlocking clip.

5

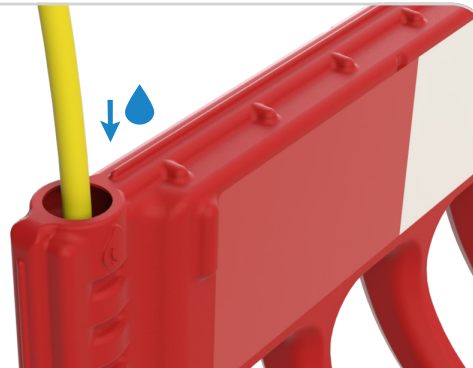

Insert a hose into the open filler hole located at the top of the barrier. Once the barrier is filled, the barrier's weight increases from 5.5kg to 27.5kg.

6

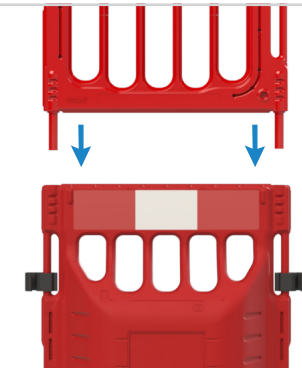

To increase the height of the barriers you can add panels. Align the vertical bars at the bottom of the fence panel with the holes on top of the Buddha and slot into place until secure.



Useful Tip: To empty the barriers, tip the barriers on to their side and open the bung at the top to release the water.



Wear the appropriate PPE for this task.