



EVO 80 BARRIER INSTALLATION GUIDE

The Evo 80 barriers create a highly visible presence on a construction site, for traffic management or to mark out a pedestrian walkway.


People to Install:



Equipment / Accessories Needed:


No accessories or tools required.

1

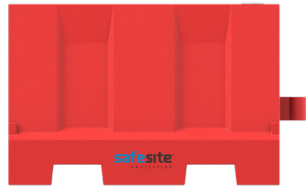

First, ensure the ground conditions are safe and appropriate when it comes to setting out this barrier.

2

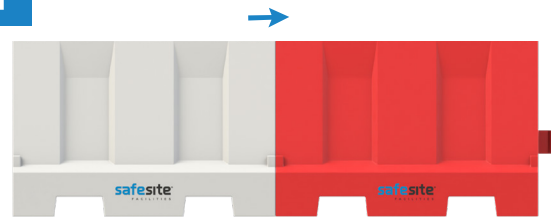


Attach one barrier to its neighbour by lifting the barrier up and through the interlocking connection points on the end.

3




Repeat this process as often as you need depending on how many barriers you require.

4

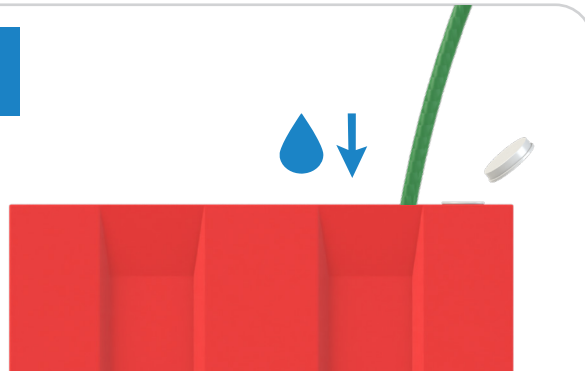


To fill with water, remove the white cap on the top of the barrier and fill with water. Replace cap firmly when the barrier is filled to the correct level.

5

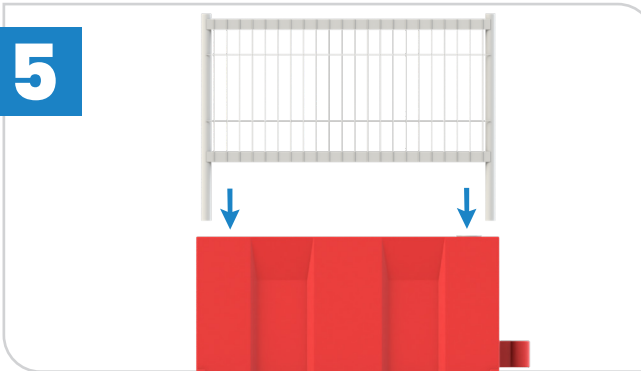

Line the mini mesh panels up with the holes on the top of the barriers and lower the mini mesh barriers into the holes and firmly place in position.

6

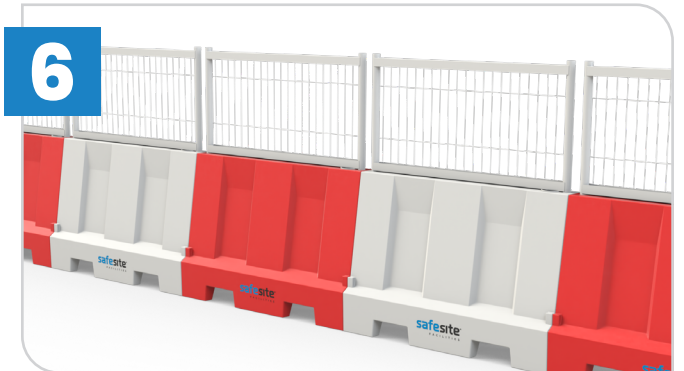

The barriers will fill a neat line. To empty the barriers, remove the cap at the top of the barrier, tip it onto its side and allow the water to run out.



Useful Tip: The barrier can be filled with sand instead of water for more weight and resistance against impact or attempted manoeuvring.



Wear the appropriate PPE for this task.